



- 1 : Adjustment screw : safety valve (pressure relief)
- 2 : Adjustment screw : levelling speed
- 3 : Adjustment screw : deceleration (upward / downward)
- 4 : Adjustment screw : acceleration (upward)
- 5 : Shut-off valve / Screw for rupture valve test
- 6 : Druck Stellschraube min. auf dem Schaft
- 7 : Adjustment screw : ram pressure (only 2:1 acting jacks)
- 8 : Adjustment screw : high speed
- 9 : Adjustment screw : downward speed compensation
- 10 : Adjustment screw : safety valve (PAM)
- 11 : Adjustment screw : min. upward
- FLT: Filter
- P : Pump
- M : Motor
- CD: Compensation downward

- R/S : Ball valve (1) / Silencer (2)
- MAN : Pressure gauge
- ML/MM: Manual lowering button
- PAM : Hand pump
- VP : Pressure valve
- CHK : Valve BY-PASS
- VMD : Downward solenoid valve
- VML : Levelling solenoid valve
- PRS : Pressure limit fitting
- ISP : Inspection gauge fitting EN
- VSP : Safety valve PAM
- VS : Safety valve
- VRP : Non-return valve
- ON : Powered
- OFF : Not powered
- DLV A3 : Non return controlled valve